

# LEED requirements and submittals in the specs

## WHERE IS IT IN THE RMW SPECIFICATIONS

LEED language in Division 01 is included in Section 018113 - SUSTAINABLE DESIGN REQUIREMENTS for LEED (all versions) and other organizations.

 
 
In RMW specifications, in the other Divisions sections LEED language is included at the beginning of the section and highlighted in yellow for the following reasons:

- It can be located immediately since it is consolidated in one place instead of being dispersed throughout the section.
- It can be added to or deleted from the section in one click.


## WHERE TO FIND IT AND HOW TO USE IT

MASTERSPEC includes the sustainability language for each section in MASTERWORKS. To use it in a section, do the following:

1. Open the MASTERSPEC section corresponding to the project section you are working on. Go to MasterWorks and click on "SUSTAINABILITY BUILDER."
2. The Sustainability Builder window opens. Select the LEED version you want (here I selected Leed v4) and the list of LEED requirements/submittals for that section appears on the right.

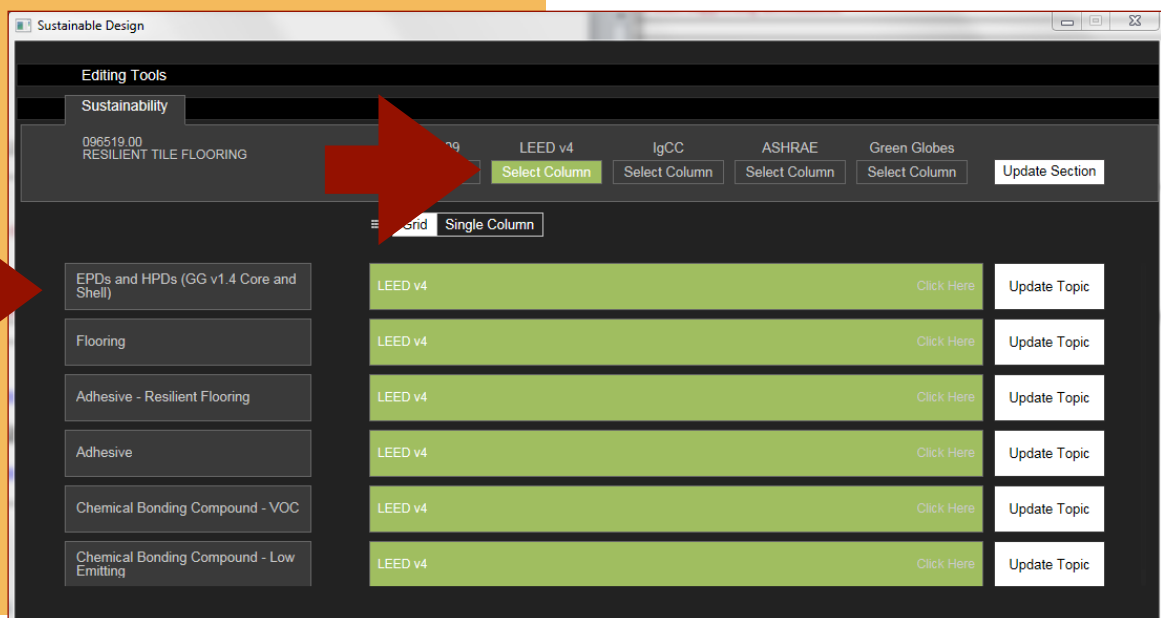
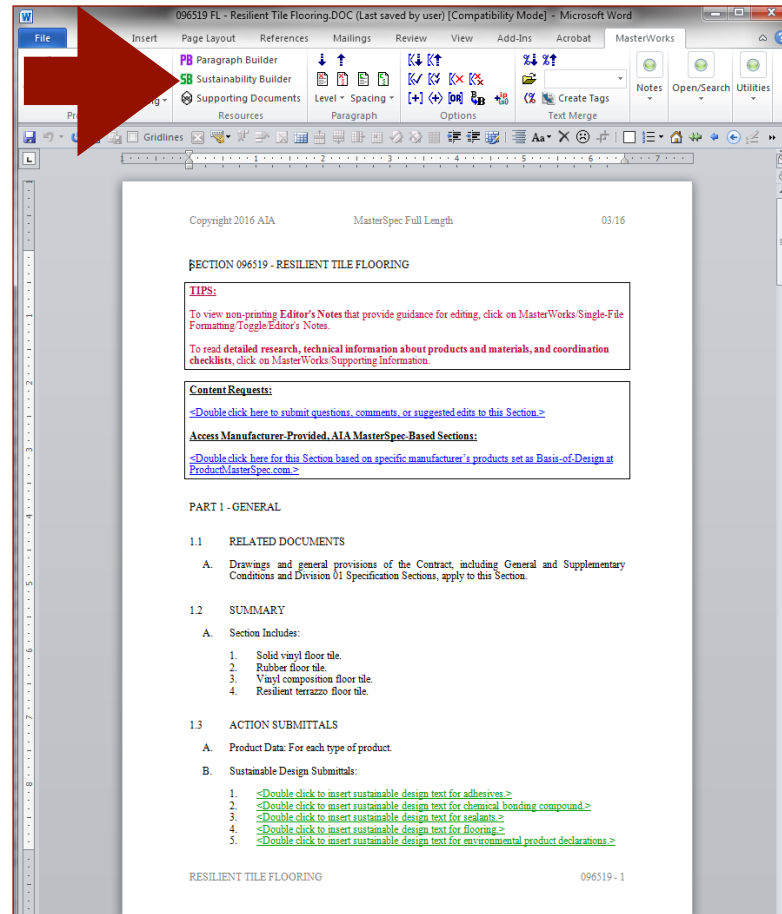


 - Click on each category, and select the paragraphs applicable to your section. The first paragraph(s) are the requirements, the second paragraph(s) are the submittals.

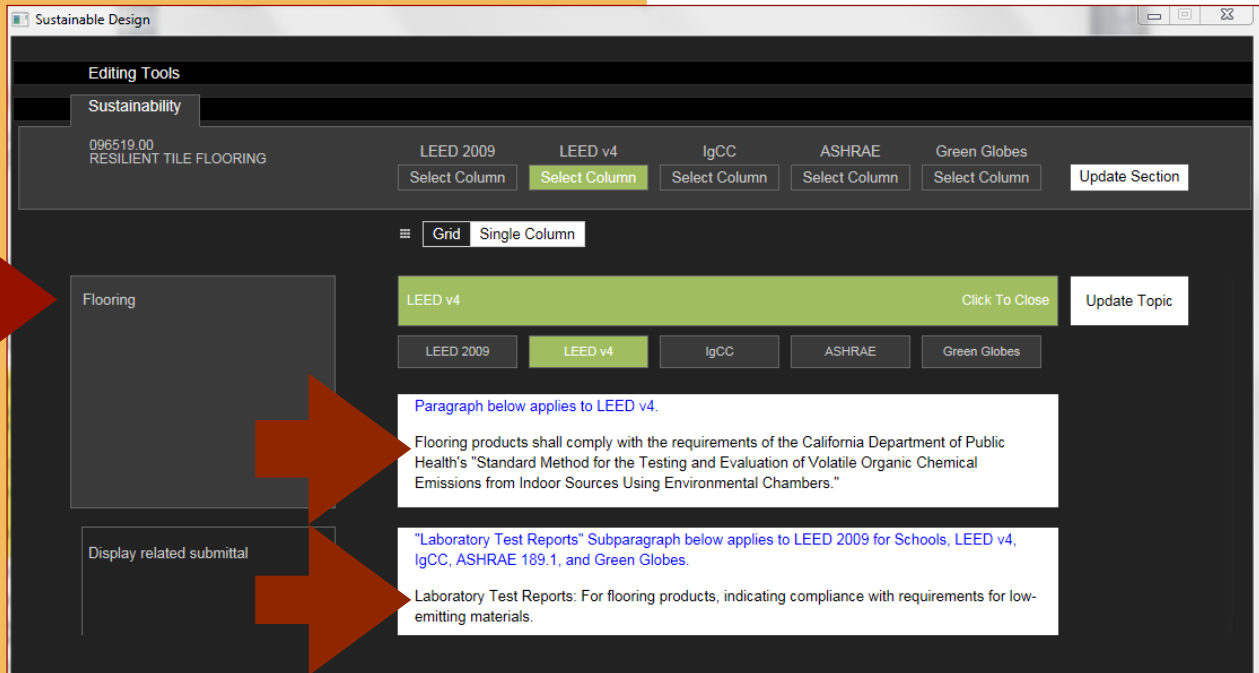

- Insert the applicable paragraphs in your section.

  - When you are finished with a category (**Flooring** in this case) click over it and the windows will close and the list of categories will open again so you can click on the next category.

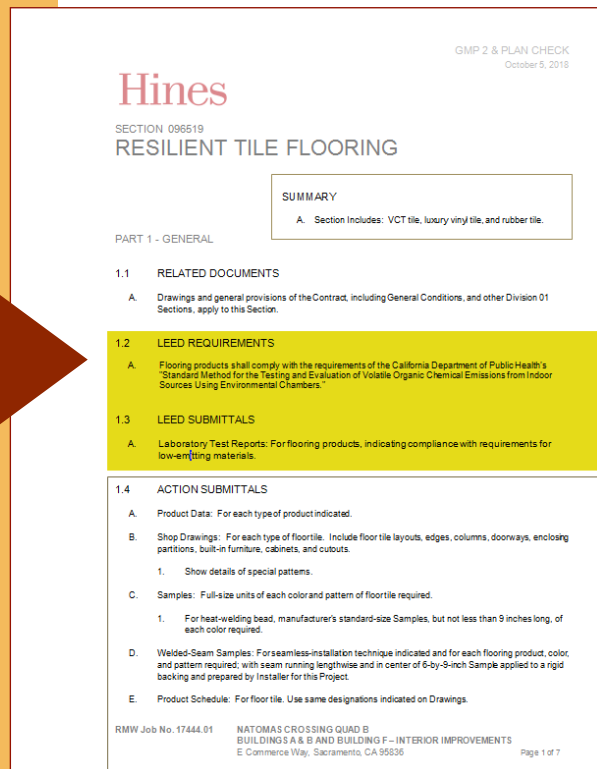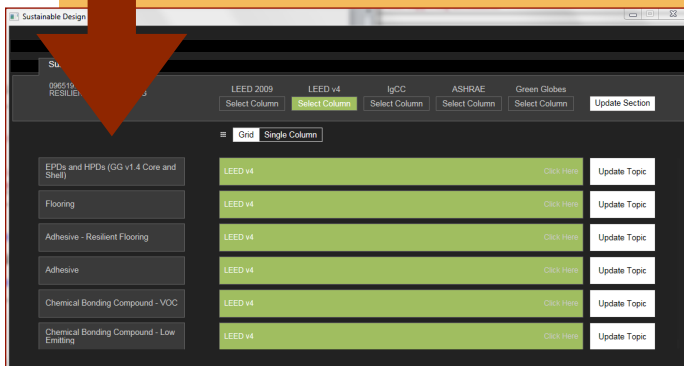

Note: If you click on "Update Topic" (the column to the right), the selected text will be inserted in the body of the section in different paragraphs, so it will not be consolidated.